

IMPORTANT SAFEGUARDS

INSTALLATION INSTRUCTIONS


When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- 1. DANGER-** Risk of shock- Disconnect power before installation.
DANGER – Risque de choc – Couper l'alimentation avant l'installation.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

TO INSTALL:

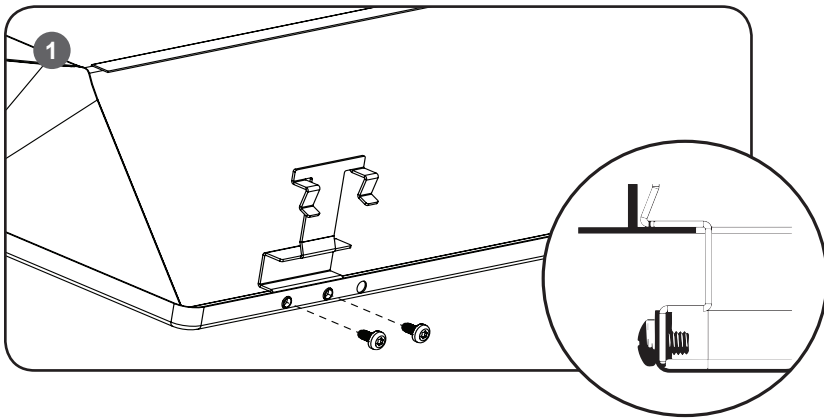

PREPARATION

STEP 1:

Insure electrical power is disconnected from luminaire.

PROCEDURE

STEP 1:




Install the clips on the troffer in the holes as shown in the **Figure 1**. Secure clips to troffer using (2) #10-32 screws provided, clips have extruded threaded holes. The clip should be mounted on the back side of the troffer edge as shown in **Figure 1**. Torque the screws to 30±3 in-lbs.


STEP 2:

Install the second clip similar to step 1 on the troffer's long side. See **Figure 2**.

STEP 3:

Install the other 2 clips on to the T-Grid in the ceiling as shown in the **Figure 3 and 4**, at approx. 61 mm from the Cross T-Grid.

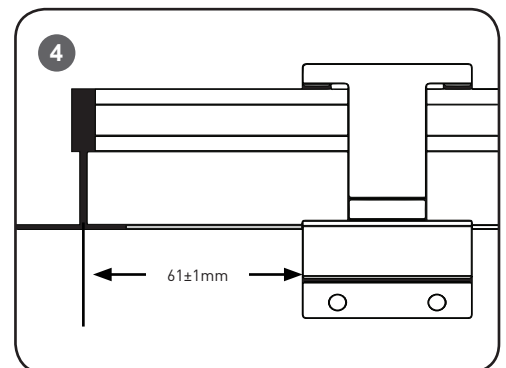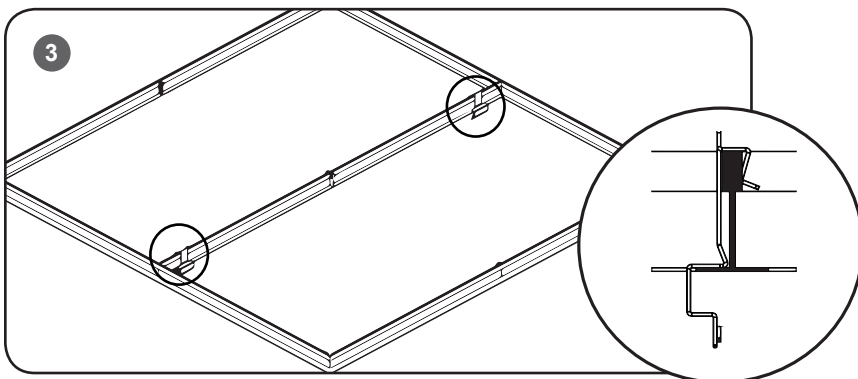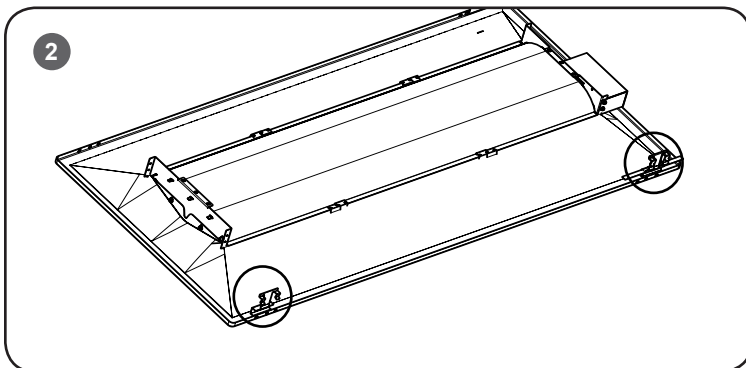

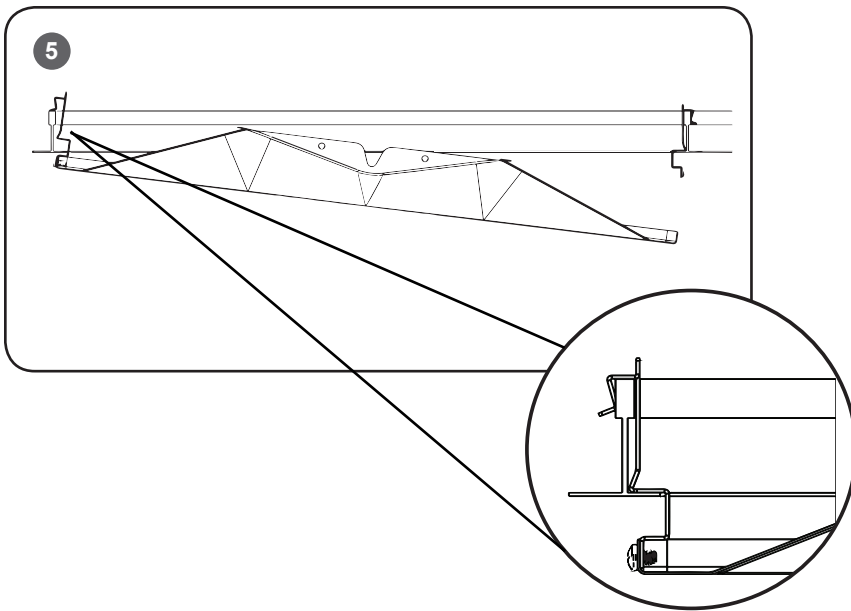

STEP 4:

Install the Troffer from Step. 2 in to the ceiling T-grid as shown in the **Figure 5**.

STEP 5:

Hold the troffer with one hand after hanging it from 2 clips in Step 4. Then align and install the troffer on to the clips from Step. 3 as shown in the **Figure 6**. Clips have an extruded hole feature and can be used for aligning the holes in the troffer for screw installation.

STEP 6:

Install the screws into the clips installed in Step 5. Repeat the process for the 4th clip. Torque the screws to 30±3 in-lbs. See **Figure 7**.

