# HIGH/LOW/OFF PIR OUTDOOR PHOTO/MOTION SENSOR IN IP66 ENCLOSURE

**FSP-2X1B SERIES** 







w/ Straight Nipple



w/ Drop Nipple



RoH

## **PRODUCT OVERVIEW**

The FSP-2x1B is a family of passive infrared (PIR) outdoor sensors that raise or lower the electric lighting level to high, low or off based on motion and/or daylight contribution. Typically, once the sensor stops detecting movement and the time delay elapses, lights will first fade to low mode, and eventually switch off. When motion is detected, the sensor ramps the light level to high mode unless the daylight contribution is sufficient.

The integral photocell can also switch the lights on and off for dusk to dawn control, so that lighting remains on overnight even without motion detection.


The sensors control 0-10VDC or nondimming LED drivers or ballasts.

The low voltage FSP-201B may be used with dim-to-off drivers or ballasts.

Initial setup and subsequent sensor adjustments are made using a Wireless Handheld Configuration Tool (FSIR-100). This tool enables adjustment of sensor parameters including high/low mode, sensitivity, time delay, cut off and more.

The FSIR-100 can read current parameter settings, and stores up to six sensor parameter profiles to speed commissioning of multiple sensors.

The FSP-2x1B family is available in three configurations for mounting inside a fixture, to the outside of a fixture or enclosure via a 1/2" knockout, or to a pole.

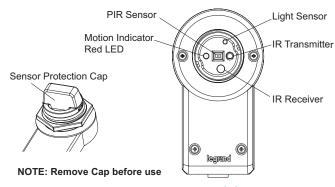

FSP-2x1B sensor module

#### **MODELS**

FSP-201B, 12-32VDC

Use with dim-to-off driver or ballast or with Wattstopper power pack

FSP-221B, 100-347VAC (single phase) or 208/230/480VAC (phase-to-phase)

#### **SPECIFICATIONS & FEATURES**

Load Ratings (FSP-221B):

- @ 120V 0-800W tungsten, ballast, LED driver; 1/6hp motor
- @ 230-240V 0-300W ballast, LED driver
- @ 277V 0-1200W ballast, LED driver; 1/6hp motor
- @ 347/480V 0-1200W ballast, LED driver, 1/6hp motor

Wiring: FSP-201B - 20AWG, FSP-221B - 18AWG Lead Length: 36" (91.44cm), 30" (76.2cm) from nipple

Current consumption (FSP-201B): 15 mA max.

0-10V sinking current: 50mA

Three interchangeable lenses for mounting between 8' and 40'

Remote setup and adjustment with handheld wireless configuration tool

Adjustable high and low modes (high: 0 to 10V, low: off, 0 to 9.8V)

Adjustable time delay (30 seconds, 5 to 30 minutes)

Adjustable cut off delay (none, 1 to 59 minutes, 1 to 5 hours)

Adjustable sensitivity/service mode (low, med, max; on-fix, off-fix)

Adjustable setpoints: hold off setpoint (none, 1 to 250 fc, auto); photocell on/off setpoint (1 to 250 fc)

Adjustable ramp and fade times (1 to 60 seconds)

Operating temperature:  $-40^{\circ}F$  to  $+167^{\circ}F$  ( $-40^{\circ}C$  to  $+75^{\circ}C$ )

Weight: FSP-201B, 4.9oz (140g); FSP-221B, 6.7oz (190g)

UL and cUL listed; CE; TUV listed

IP66 rated

FSIR-100 is FCC Part 15 compliant

Five year warranty


#### **MATERIALS**

Polycarbonate, flame retardant, UV resistant, impact resistant, recyclable

Meets materials restrictions of RoHS


\*PEP designation applies to FSP-221B only


# **DIMENSIONS**

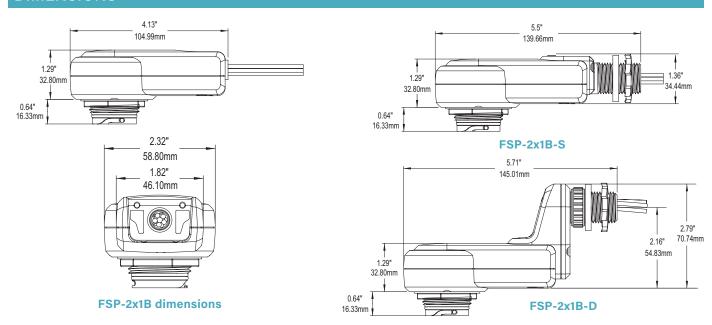


## **COVERAGE**


FSP-L2 top and side coverage patterns

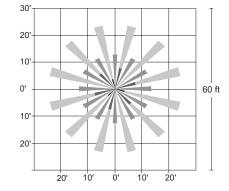

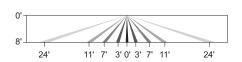



FSP-L3 top and side coverage patterns

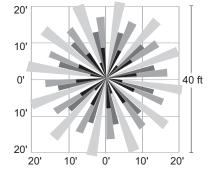

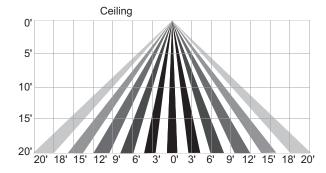


FSP-L7 top and side coverage patterns

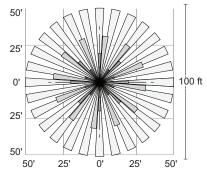


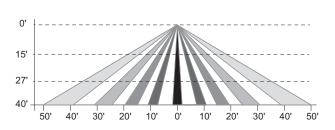


www.legrand.us/wattstopper \_\_\_\_\_ designed to be better.

### **DIMENSIONS OF LENS OPTIONS**

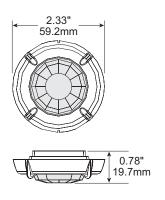

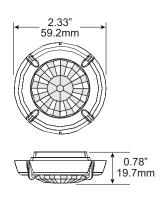

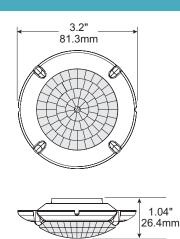

**FSP-L2 dimensions** 


**FSP-L3 dimensions** 


**FSP-L7 dimensions** 

#### FSP-L2-S, FSP-L3-S, and FSP-L7-S Dimensions

The FSP-Lx-S models include a shroud, which blocks high-angle light coming from the fixture, to improve photocell performance. With the shroud attached, the dimensions for all three lenses are identical

FSP-L2-S and FSP-L3-S

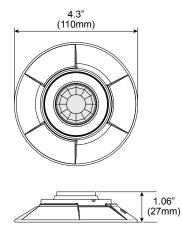

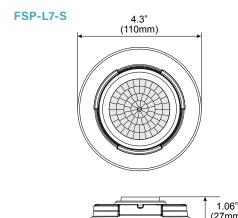


## INSTALLING THE FSP-2X1B SENSOR IN LIGHT FIXTURE

- 1. Determine an appropriate mounting location inside the light fixture. Allow a minimum distance of 0.2" (5.1mm) from the end of the sensor to the wall of the fixture.
- 2. Drill a 1.30" (33mm) diameter hole through the sheet metal in the bottom of the fixture.
- 3. Place the rubber gasket on the threaded collar, and install the sensor face down, parallel to the mounting surface. Ensure the rubber gasket touches the inside surface of the fixture. Install the tightening nut securely against the fixture to a torque of 25-30 in-lbs to ensure IP rating is maintained. An optional collar can be installed in place of the tightening nut on the FSP-2x1B. This collar is included with the FSP-2x1B-S and FSP2x1B-D.

## Installing the FSP-2x1B in the light fixture


NOTE: The outside fixture wall thickness should be no greater than 0.125" (3.18mm) for optimal sensor mounting and security.

- 4. Align the locking features between the sensor and lens module and push the lens module forward until the 0-ring seals firmly. Turn the lens module clockwise to lock in
- 5. Connect load, supply and control wires (see Figures 3 and 4).
- 6. Restore power from the circuit breaker.

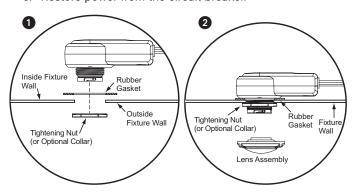


### INSTALLING THE FSP-2X1B-S OR FSP-2X1B-D TO A FIXTURE OR POLE

- Determine an appropriate mounting location minimizing the electrical light contribution to the sensor's photocell.
- 2. Drill a 0.875" (22mm) diameter hole through the mounting surface, or mount to a 1/2" knockout.
- 3. Place the rubber gasket on the threaded collar, and install the sensor face down, parallel to the mounting surface. Ensure the rubber gasket touches the mounting surface. If needed, add the spacer between the sensor body and the rubber gasket to ensure a secure fit. Install the nipple nut and torque to 25-30 in-lbs to maintain IP rating.
- 4. Align the locking features between the sensor and lens module and push the lens module forward until the 0-ring seals firmly. Turn the lens module clockwise to lock in place.
- 5. Connect wires (see wiring diagrams).
- 6. Restore power from the circuit breaker.

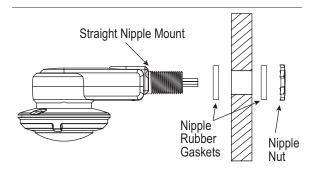

#### Installing the FSP-2x1B-S to the exterior of a fixture


**NOTE:** The outside fixture wall thickness should be no greater than 0.125" (3.18mm) for optimal sensor mounting and security.

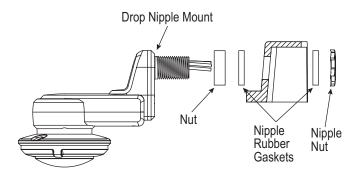


Installing the FSP-2x1B-D to a pole using the optional spacer

**NOTE:** The outside fixture wall thickness should be no greater than 0.125" (3.18mm) for optimal sensor mounting and security.

## WIRING DIAGRAMS FOR LOW VOLTAGE FSP-201B SENSORS

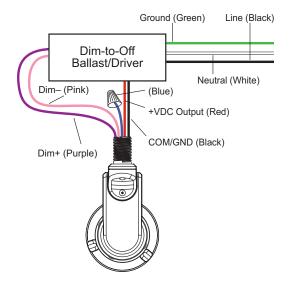

FSP-201B wiring with dim-to-off ballast or LED driver

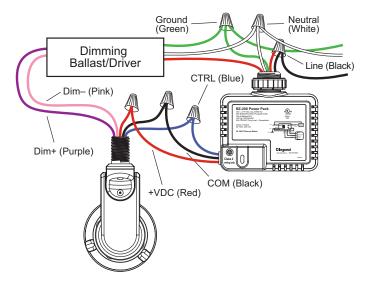



FSP-201B wiring with dimming ballast or LED driver and power pack for on/off control. If using a non-dimming ballast/driver, simply cap the pink and purple leads

NOTE: Per UL, the 0-10V negative dimming wire color has been changed from gray to pink.

www.legrand.us/wattstopper \_\_\_\_\_ designed to be better-

#### WIRING DIAGRAMS FOR LINE VOLTAGE FSP-221B SENSORS

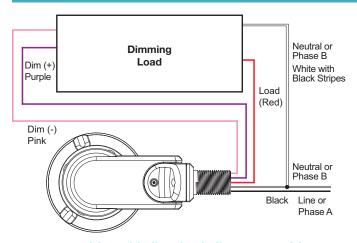


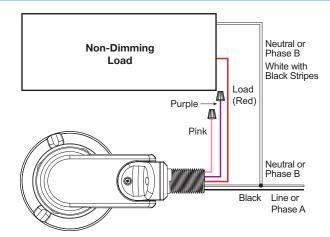

FSP-221-B wiring with dimming ballast or LED driver

FSP-221-B wiring with non-dimming load


#### ADJUSTABLE CONTROL PARAMETERS

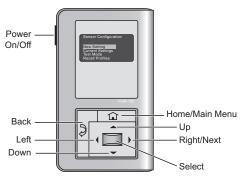

The FSIR-100 is a convenient handheld remote tool for setting up the FSP-2x1B. Adjustable settings can be changed as needed for specific applications.

- High Mode: When the sensor detects motion the dimming control output ramps up to the selected HIGH light level (default is 10V).
- Low Mode: After the sensor stops detecting motion and the time delay expires the dimming control output fades down to the selected LOW light level (default is 1V).
- Time Delay: The selected time period that must elapse after the last time the sensor detects motion for the electric lights to fade to LOW mode (default is 5 minutes).
- Cut Off: The time period that must elapse after the lights fade to LOW mode and the sensor detects no motion for the electric lights to turn OFF (default is 1 hour).




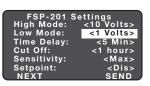





- Sensitivity: The response of the PIR detector to motion within the sensor's coverage area (default is max).
- Setpoint: When enabled, the selectable ambient light level threshold that will hold the electric lights off or at LOW level when the sensor detects motion (default is disabled).

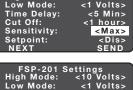



The Auto option invokes an automatic calibration procedure to establish an appropriate setpoint based upon the contribution of the electric light. As part of this procedure, the controlled load is turned on for two minutes to warm up the lamp, and then switched off and on eight times, terminating in an off state. After this process, a new setpoint value is automatically calculated.

 Photocell On/Off: When enabled, the sensor will force the load OFF after the light level has exceeded the selected photocell setpoint for at least a minute. It will

FSP-201	Settings
Ramp Up: Fade Down	<dis></dis>
Photocell:	<dis></dis>
PRIOR S	AVE SEND

also force the load ON when the light level goes below the setpoint, even if no motion is detected (default if disabled).

www.legrand.us/wattstopper \_\_\_\_\_ designed to be better-

Once ON (initially at High), the load will dim to Low following the Time Delay, and to OFF following the Cut Off time. To ensure dusk to dawn control, Cut Off must be disabled.

The photocell On/Off setpoint is automatically set to maintain a deadband of at least 10 fc above the Hold Off Setpoint to prevent cycling if the two features are used together.

- Ramp Up Time: Time period for light level to increase from LOW to HIGH (default is disabled; lights switch instantly).
- Fade Down Time: Time period for light level to decrease from HIGH to LOW (default is disabled; lights switch instantly).

FSP-201 Settings				
Ramp Up Fade Dov Photoce	wn:	<dis> <dis> <dis></dis></dis></dis>		
PRIOR	SAVE	SEND		

FSP-201 Settings			
Ramp U <sub>l</sub> Fade Do Photoce	wn:	<dis> <dis> <dis></dis></dis></dis>	
PRIOR	SAVE	SEND	

 Lock Settings: Time delayed IR communication lock initiated from the FSIR-100 to prevent unauthorized changes of FSP-2x1B parameters until power is cycled to the sensor (default is disabled).

To lock settings, select Lock Delay, set a time, and press SEND to send the parameter change to FSP-2x1B. After the countdown, FSP-2x1B will no longer respond to the FSIR-100. If additional configuration is required, cycle the power to the FSP-2x1B off and then back on. To disable the lock parameter after the power cycle, select Lock Delay, select Disable, and press SEND.

## SEQUENCE OF OPERATION

- Dimming: When motion is detected within the sensor's coverage area, the sensor sends a signal to ramp the load up to the
  selectable High Mode level unless the ambient light level is higher than the selected setpoint. When no motion is detected for
  the duration of the time delay setting (factory preset at 5 minutes), the lights will go to the selectable Low Mode level based
  on the signal from the sensor. If desired, a cut off time delay (factory preset at 1 hour) will trigger to eventually turn the lights
  OFF.
- 2. **Non dimming:** When motion is detected within the sensor's coverage area, the sensor sends a signal to turn the load ON unless the ambient light level is higher than the selected setpoint. When no motion is detected for the duration of the time delay setting (factory preset at 5 minutes), the lights will go OFF based on the signal from the sensor.
- 3. **Dusk to dawn control:** When photocell on/off is enabled, and the ambient light falls below the photocell setpoint, the sensor ramps the load up to the selectable High Mode level. If no motion is detected for the duration of the time delay setting (factory preset at 5 minutes), the lights will go to the selectable Low Mode level. If the cut off time delay is disabled, the load will remain on, at High or Low level, based on motion detection, until the ambient light increases above the photocell setpoint.

#### ORDERING INFORMATION

	Master Pack Details				
	Master Pack	Case dimensions (inches)			Woight
Catalog #	Quantity	Length	Width	Height	Weight (pounds)
FSP-201B	40	19.2	12.7	11.6	18.3
FSP-221B	40	22.2	15.9	16.1	21
FSP-201B-S-L2 or L3	40	22.2	15.9	16.1	23.2
FSP-201B-S-L7	40	22.2	15.9	16.1	24.9
FSP-201B-D-L2 or L3	40	22.2	15.9	16.1	24.9
FSP-201B-D-L7	40	22.2	15.9	16.1	26.7
FSP-221B-S-L2 or L3	40	22.2	15.9	16.1	27.6
FSP-221B-S-L7	40	22.2	15.9	16.1	28.9
FSP-221B-D-L2 or L3	40	22.2	15.9	16.1	28.9
FSP-221B-D-L7	40	22.2	15.9	16.1	31.5

Inner Pack Details					
Inner	Case dim	M/-1-ba			
Pack Quantity	Length	Width	Height	Weight (pounds)	
20	18.8	12.3	5.3	8.3	
20	21.7	15.4	7.6	10.5	
20	21.7	15.4	7.6	10.5	
20	21.7	15.4	7.6	11.4	
20	21.7	15.4	7.6	11.4	
20	21.7	15.4	7.6	12.2	
20	21.7	15.4	7.6	12.8	
20	21.7	15.4	7.6	13.6	
20	21.7	15.4	7.6	13.6	
20	21.7	15.4	7.6	14.4	

www.legrand.us/wattstopper \_\_\_\_\_ designed to be better.

Cat	alog #	Color	Description	Voltage			
	FSP-201B	White	Fixture mount, passive infrared motion sensor, low voltage	12-32 VDC			
	FSP-221B	White	Fixture mount PIR sensor, extended voltage	100-347VAC or 208/230/480VAC			
	FSIR-100	Black	Remote Handheld Configuration Tool Three standard 1.5 AAA alkaline batteries (inclu				
	FSP-L2	White					
	FSP-L2-B	Black					
	FSP-L2-BR	Brown	360° lens, maximum coverage 48' diameter from 8' height				
	FSP-L2-G	Grey					
	FSP-L2-S	White	360° lens, maximum coverage 48' diameter from 8' height, with	n shroud; Minimizes high-angle light contribution to			
	FSP-L3	White					
	FSP-L3-B	Black					
	FSP-L3-BR	Brown	360° lens, maximum coverage 40′ diameter from 20′ height				
	FSP-L3-G	Grey					
	FSP-L3-S	White	360° lens, maximum coverage 40' diameter from 20' height, with shroud; Minimizes high-angle light contribution to photocell				
	FSP-L7	White					
	FSP-L7-B	Black	360° lens, maximum coverage 100′ diameter from 40′ height				
	FSP-L7-BR	Brown	360° lens, maximum coverage 100′ diameter from 40′ height				
	FSP-L7-G	Grey					
	FSP-L7-S	White	360° lens, maximum coverage 100' diameter from 40' height, with shroud; Minimizes high-angle light contribution to				
	FSP-C1-W	White					
	FSP-C1-B	Black	Small collar, for use with FSP-L2 and FSP-L3 lenses	to lone)			
	FSP-C1-BR	Brown	(Optional aesthetic collar to transition from fixture housing to lens)  Note: Not used with lenses that include shroud				
	FSP-C1-G	Gray					
	FSP-C2-W	White					
	FSP-C2-B	Black	Large collar, for use with FSP-L7 lens	to lone)			
	FSP-C2-BR	Brown	(Optional aesthetic collar to transition from fixture housing to lens)  Note: Not used with lens that includes shroud				
	FSP-C2-G	Gray					

Note: Unless used with a driver or ballast with a low voltage power supply, the FSP-201B requires a Wattstopper power pack (ordered separately) to operate.

FSP-Lx series lens required for operation; order lens separately. FSIR-100 required for configuration; order separately.

To order -S or -D model sensor, select one option from each column below and combine part numbers (as an example, FSP-201B-S-L2). Available in white only.				
Pole or Box Mount Sensor Voltage	Nipple Configuration	Lens Option	Color	
FSP-201B, 12-32VDC sensor	-S, Straight Nipple	L2, 360° lens, max coverage 48'diameter from 8' height	White	
FSP-221B, 100-347VAC or 208/230/480VAC sensor	☐ -D, Drop Nipple	L3, 360° lens, max coverage 40'diameter from 20' height		
200/230/400VAC SEIISOI		L7, 360° lens, max coverage 100'diameter from 40' height		

Information supplied above is subject to change. Harmonization code: 8538908080. Country of origin: China.

27429r4 Rev 06/2021

